

- [SALE](#)
- [Aerials](#)
- [Batteries](#)
  - [LG batteries](#)
  - [Motorola batteries](#)
  - [Nokia batteries](#)
  - [Panasonic batteries](#)
  - [Sagem batteries](#)
  - [Samsung batteries](#)
  - [Siemens batteries](#)
  - [Sony Ericsson batteries](#)
- [Bluetooth](#)
- [Buy 1 get 1 free](#)
- [Camera add-ons](#)
- [Car kits](#)
  - [Budget car kits](#)
  - [Professional car kits](#)
- [Chargers](#)
  - [Car chargers](#)
  - [Desktop chargers](#)
  - [Emergency/battery chargers](#)
  - [Mains chargers](#)
  - [USB chargers](#)
- [Covers](#)
  - [Motorola covers](#)
    - [Motorola C350 covers](#)
    - [Motorola C650 covers](#)
    - [Motorola L6 covers](#)
    - [Motorola L7 covers](#)
    - [Motorola RAZR V3 covers](#)
  - [Nokia covers](#)
    - [Nokia 1100 covers](#)
    - [Nokia 1101 covers](#)
    - [Nokia 1600 covers](#)
    - [Nokia 2100 covers](#)
    - [Nokia 2300 covers](#)
    - [Nokia 2310 covers](#)
    - [Nokia 2600 covers](#)
    - [Nokia 2630 covers](#)
    - [Nokia 3100 covers](#)
    - [Nokia 3110 Classic covers](#)
    - [Nokia 3120 covers](#)
    - [Nokia 3200 covers](#)
    - [Nokia 3220 covers](#)
    - [Nokia 3300 covers](#)
    - [Nokia 3310 covers](#)
    - [Nokia 3330 covers](#)
    - [Nokia 3410 covers](#)
    - [Nokia 3510 covers](#)
    - [Nokia 3510i covers](#)
    - [Nokia 3650 covers](#)
    - [Nokia 5100 covers](#)
    - [Nokia 5140 covers](#)
    - [View more](#)
      - [Nokia 5140i covers](#)
      - [Nokia 5200 covers](#)
      - [Nokia 5210 covers](#)
      - [Nokia 5300 covers](#)
      - [Nokia 5310 covers](#)
      - [Nokia 5610 covers](#)
      - [Nokia 5700 covers](#)
      - [Nokia 6020 covers](#)
      - [Nokia 6030 covers](#)
      - [Nokia 6080 covers](#)
      - [Nokia 6100 covers](#)
      - [Nokia 6101 covers](#)
      - [Nokia 6103 covers](#)
      - [Nokia 6110 Navigator covers](#)
      - [Nokia 6111 covers](#)
      - [Nokia 6131 covers](#)
      - [Nokia 6220 covers](#)
      - [Nokia 6230 covers](#)
      - [Nokia 6230i covers](#)
      - [Nokia 6233 covers](#)
      - [Nokia 6234 covers](#)
      - [Nokia 6280 covers](#)
      - [View more](#)
        - [Nokia 6300 covers](#)
        - [Nokia 6310 covers](#)
        - [Nokia 6310i covers](#)
        - [Nokia 6500 Classic covers](#)
        - [Nokia 6500 Slide covers](#)
        - [Nokia 6510 covers](#)
        - [Nokia 6600 covers](#)
        - [Nokia 6610 covers](#)
        - [Nokia 6610i covers](#)
        - [Nokia 6630 covers](#)
        - [Nokia 6670 covers](#)
        - [Nokia 6680 covers](#)
        - [Nokia 6681 covers](#)
        - [Nokia 7200 covers](#)
        - [Nokia 7210 covers](#)
        - [Nokia 7250 covers](#)
        - [Nokia 7250i covers](#)
        - [Nokia 7260 covers](#)

Sony Ericsson W595 disassembly

SHARE

If you require a new screen, phone cover and screwdrivers, they can be purchased here:  
<http://www.formymobile.co.uk/proddetail.php?prod=w595lcd>

**Tools required:** Phillips screwdriver, plastic tool such as a guitar plectrum or credit card.

- Remove your back cover, battery, sim and memory card



- Run something like a credit card under the metal plate at the top of the phone. It is stuck down tight with double sided tape but it will come away with a little force.



- Now remove the two screws you can see.



- [Nokia 7270 covers](#)
- [Nokia 7370 covers](#)
- [Nokia 7500 Prism covers](#)
- [Nokia 7900 Prism covers](#)
- [View more](#)
  - [Nokia 7600 covers](#)
  - [Nokia 7610 covers](#)
  - [Nokia 8210 covers](#)
  - [Nokia 8310 covers](#)
  - [Nokia 8800 covers](#)
  - [Nokia 8910 covers](#)
  - [Nokia E90 covers](#)
  - [Nokia N72 covers](#)
  - [Nokia N73 covers](#)
  - [Nokia N95 covers](#)
  - [Nokia N95 8GB covers](#)



- Starting near the top of the phone, run your credit card along the join of the front cover. When you have released the cover as much as shown below, slide the cover down to remove it (clips hold the cover on at the bottom which will be bent if you don't slide the cover off).

- [Sagem covers](#)
  - [Sagem MYX-2 covers](#)
  - [Sagem MYX-5 covers](#)
  - [Sagem MYX-6 covers](#)
  - [Sagem MYX-7 covers](#)
  - [Sagem MYX5-2 covers](#)
- [Samsung covers](#)
  - [Samsung D500 covers](#)
  - [Samsung D600 covers](#)
  - [Samsung E700 covers](#)
- [Siemens covers](#)
  - [Siemens A55 covers](#)
  - [Siemens A60 covers](#)
  - [Siemens C45 covers](#)
  - [Siemens C55 covers](#)
  - [Siemens C60 covers](#)
  - [Siemens C62 covers](#)
  - [Siemens CX65 covers](#)
  - [Siemens M50 covers](#)
  - [Siemens MC60 covers](#)
- [Sony Ericsson covers](#)
  - [Sony Ericsson D750i covers](#)
  - [Sony Ericsson K300i covers](#)
  - [Sony Ericsson K610i covers](#)
  - [Sony Ericsson K700i covers](#)
  - [Sony Ericsson K750i covers](#)
  - [Sony Ericsson K800i covers](#)
  - [Sony Ericsson K850i covers](#)
  - [Sony Ericsson M600i covers](#)
  - [Sony Ericsson T610 covers](#)
  - [Sony Ericsson T630 covers](#)
  - [Sony Ericsson W800i covers](#)
  - [Sony Ericsson W810i covers](#)
  - [Sony Ericsson W880i covers](#)
  - [Sony Ericsson Z200 covers](#)
  - [Sony Ericsson Z600 covers](#)



- You should now have the front cover removed. Remove the small screw you can see.

- [Data cables](#)
  - [LG data cables](#)
  - [Motorola data cables](#)
  - [Nokia data cables](#)
  - [O2 data cables](#)
  - [Panasonic data cables](#)
  - [Sagem data cables](#)
  - [Samsung data cables](#)
  - [Sharp data cables](#)
  - [Siemens data cables](#)
  - [Sony Ericsson data cables](#)
- [Dual sim covers](#)
- [Flashing keypads](#)
- [Gift ideas](#)
- [Ghost sims](#)
- [Hands free kits](#)
  - [LG hands free kits](#)
  - [Motorola hands free kits](#)
  - [Nokia hands free kits](#)
  - [Panasonic hands free kits](#)
  - [Sagem hands free kits](#)
  - [Samsung hands free kits](#)
  - [Siemens hands free kits](#)
  - [Sony Ericsson hands free kits](#)
- [Keypads](#)
  - [Nokia keypads](#)
  - [Sony Ericsson keypads](#)
- [LCD screens](#)
  - [Apple iPhone LCD screens](#)
  - [BlackBerry LCD screens](#)
  - [LG LCD screens](#)
  - [Motorola LCD screens](#)
  - [Nokia LCD screens](#)
  - [O2 XDA LCD screens](#)
  - [Sagem LCD screens](#)
  - [Samsung LCD screens](#)
  - [Siemens LCD screens](#)
  - [Sony Ericsson LCD screens](#)
- [Memory cards](#)
- [Neck straps](#)
- [Phone holders](#)
- [Phone jewellery](#)
- [Protective cases](#)
  - [LG cases](#)
  - [Motorola cases](#)



- With the slide open halfway, lift the up the part you've just removed the screw from to reveal three ribbon connectors. Each connector has a black latch which you need to flick over the release the ribbon.



- [Nokia cases](#)
  - [Panasonic cases](#)
  - [Sagem cases](#)
  - [Samsung cases](#)
  - [Siemens cases](#)
  - [Sony Ericsson cases](#)
- [Spare parts](#)
  - [Apple iPhone spare parts](#)
  - [BlackBerry spare parts](#)
  - [LG spare parts](#)
  - [Motorola spare parts](#)
  - [Nokia spare parts](#)
  - [Sagem spare parts](#)
  - [Samsung spare parts](#)
  - [Siemens spare parts](#)
  - [Sony Ericsson spare parts](#)
- [Sim cards](#)
- [Unlocking](#)

Other info:

Can't find it?

Currency converter

Customer feedback

Disassembly guides

MSN Messenger

Payment options

Price promise

Trade/Wholesale

About us

Contact us

Delivery info

FAQ

Security & privacy

Site map



- You now have the LCD screen removed. You don't need to go any further if you only want to replace the LCD.



- Remove the speaker and connecting ribbon etc. It's just stuck down lightly. Remove the two screws you can see at the top of the phone.



- You now need to lift the keypad up. It's stuck down lightly with double sided tape. Remove the two screws you can see.





- Run your credit card around the join of the grey part of the phone to release a number of clips. Turn the phone over and release a few more clips in the battery compartment.



- Your phone should now look like below. Two small bezels (shown in the picture) will pop off when you remove the back part of the phone. Now remove the two silver screws you can see.




- You can now remove the battery compartment. A ribbon is stuck to the side of this and will peel away quite easily. Remove the two screws you can see.






- The circuit board will now be loose but still connected by a ribbon. Again, flick the black latch over to release the ribbon.

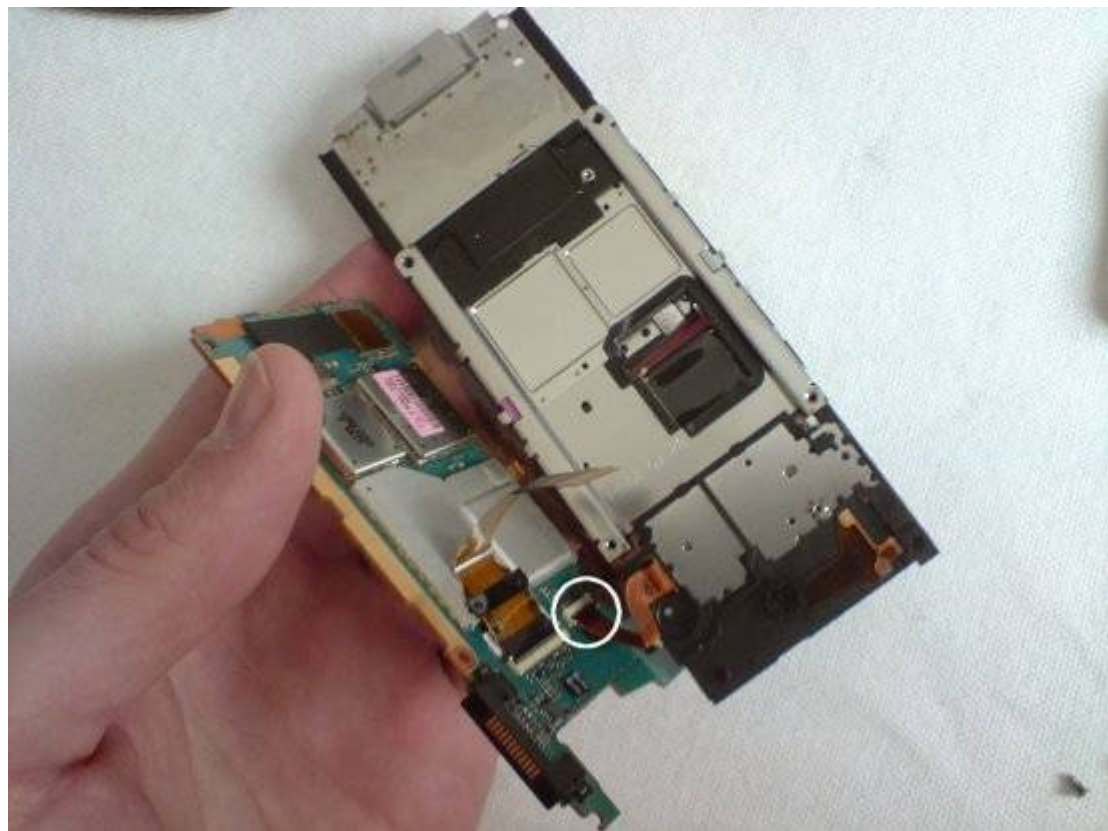

- Disassembly is complete. Reverse the whole procedure for reassembly.

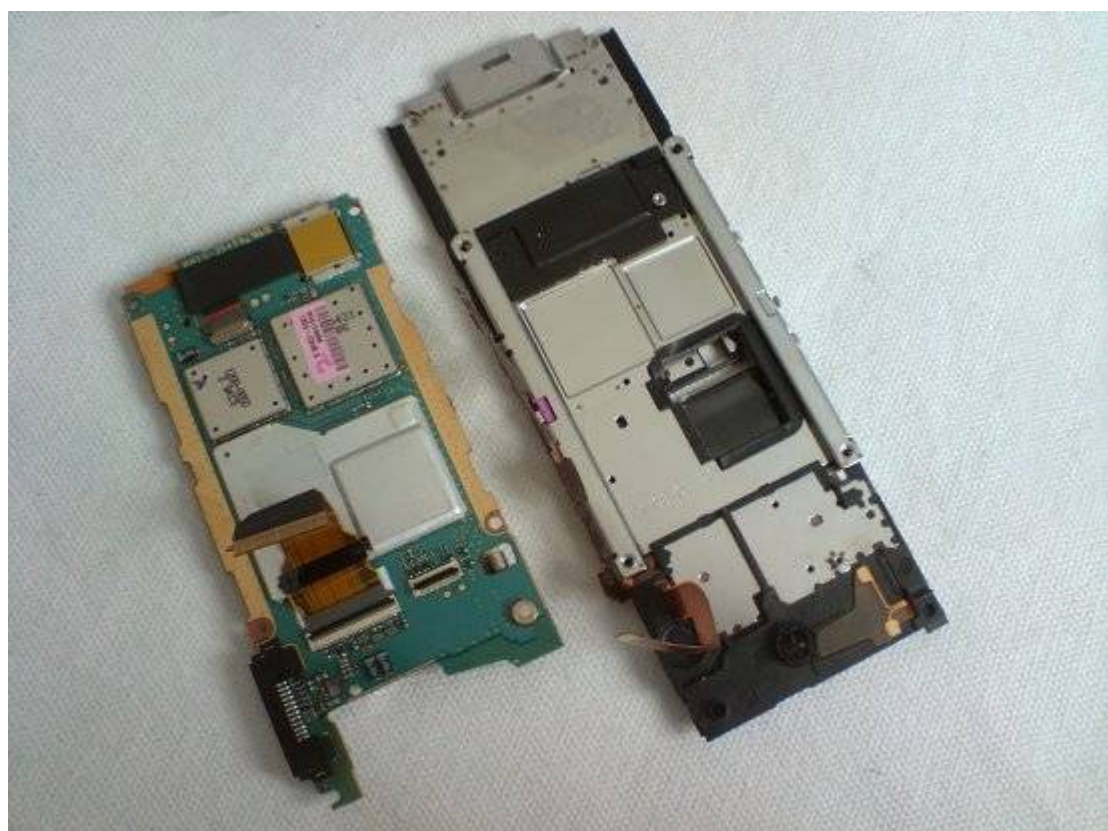

If you have any questions about Sony Ericsson W595 disassembly, email [rob.lee@formymobile.co.uk](mailto:rob.lee@formymobile.co.uk). The official service manual for this phone may also help you with further Sony Ericsson W595 disassembly. Click [here](#) for details

[About](#) | [Contact](#) | [Delivery](#) | [FAQ](#) | [Security](#) | [Terms](#)

© Phonefinder Ltd. Registered in England & Wales, 4663875, 2003-2009. All rights reserved